



FACADE DECORATION

DOMOSTYL®

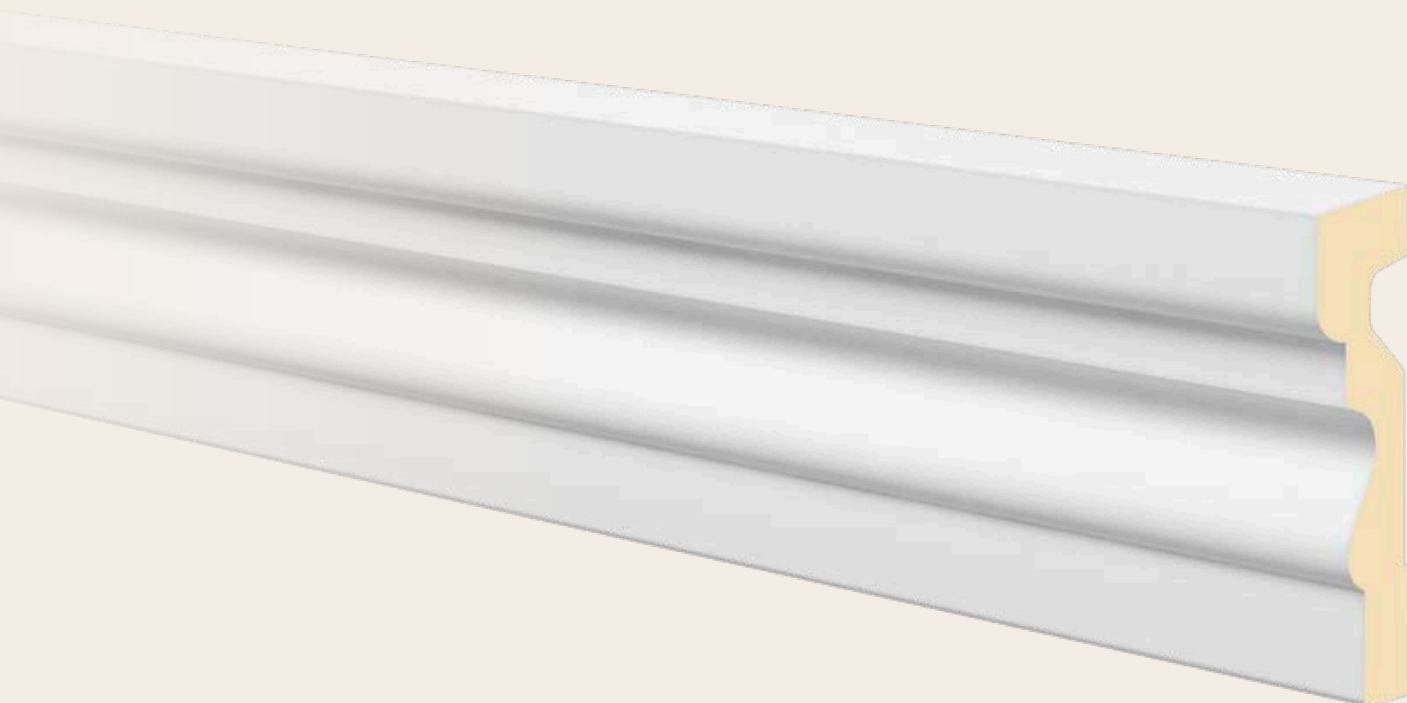

7

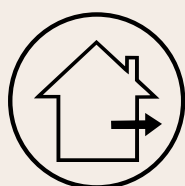

NOËL & MARQUET
DESIGN ELEMENTS

INDEX

INFO

PRODUCT OVERVIEW	7
GLUE	11
GLUE CONSUMPTION	13
TOOLS	15
FINISH	19
INSPECTIONS INSTRUCTIONS	21

I • CORNICES

CORNICES GENERAL	
PREPARATION, CUTTING, INSTALLATION	1/2
CORNICES Z40 • Z41 • Z42 ARSTYL®	
CUTTING, REGULAR CORNERS, IRREGULAR CORNERS	1/6
CORNICE Z7 ARSTYL®	
FIX THE VARIO EXTENSION, INSTALLATION	1/7
SPECIAL CASES	
CORNICES IN A STAIRWEL	1/10
STEPPED WALL	1/11
EXPANSION JOINTS AND ANTI-VIBRATION ISOLATION JOINTS	1/12
HOLLOW JOINT	1/12
STOPPING A MOULDING	1/13

2 • CHAIR RAILS

CHAIR RAILS GENERAL	
PREPARATION, CUTTING, INSTALLATION	2/2
CURVES FOR CHAIR RAILS	
PREPARATION, CUTTING, INSTALLATION	2/5
SPECIAL CASE	
STOPPING A CHAIR RAIL	2/7

3 • SKIRTINGS

SKIRTINGS GENERAL	
PREPARATION, CUTTING, INSTALLATION	3/2
SPECIAL CASES	
STOPPING A SKIRTING	3/5

4 • FLEXIBLE PROFILES

ARSTYL® FLEX • WALLSTYL® FLEX	
RADIUS	4/2

5 • LIGHTING PROFILES

INDIRECT LIGHTING - CORNICES	
PREPARATION, CUTTING, INSTALLATION	5/2
CORNICES NOMASTYL® OR WALLSTYL®	
FOR INDIRECT LIGHTING	5/6
WT4 WALLSTYL(r) - COMPLEMENT	5/7
INDIRECT LIGHTING SKIRTINGS	
PREPARATION, CUTTING, INSTALLATION	5/8
LIGHTING PROFILES - FAQ	5/13

6 • DESIGN ELEMENTS

CEILING ROSES S ARSTYL®	
PREPARATION, INSTALLATION	6/2
R61 IN COMBINATION WITH Z61	
PREPARATION, CUTTING, INSTALLATION	6/3
PILASTERS ARSTYL®	
PREPARATION, CUTTING, INSTALLATION	6/5
WALL PANELS ARSTYL® WALL PANELS	
PREPARATION, INSTALLATION	6/8
WALL TILES ARSTYL® WALL TILES	
VARIED AND CREATIVE WALL INSTALLATION OPTIONS	6/12
PREPARATION, INSTALLATION	6/12
SPECIAL CASES	
INSTALLATION ON A COMPLETE WALL	6/14

7 • FACADE DECORATION

WINDOW SILL PROFILE	
PREPARATION, ANGLED SECTION	7/2
ANGLED WINDOW SILL PROFILE	7/4
FRAME PROFILES	7/5
STRING COURSE	7/9
CUT IN THE PROFILE (DOWNPIPE)	7/9
KEY STONE	7/9
AREA OF THE ROOF OVERHANG AND PASSAGE	7/11
GABLE	7/12
STONES	7/13
CEILING ROSES	7/14
REPAIR OF DAMAGED PROFILES	7/15

This technical brochure has been prepared in accordance with the current state of our knowledge. We reserve the right to make modifications without prior notice. Without a written agreement to the contrary, our studies, descriptions, notices, advice or other technical documents concerning the functionality, behaviour or performance of goods are supplied as an indication only according to the common use of the goods under normal conditions of application, use and climate (moderate European regions), or those indicated to us by customers in writing. Save for the existence of fraud or gross negligence on our part, these studies, recommendations and other technical documents do not engage our liability. It is the customer's responsibility to check that they are suitable for the intended use.



WINDOW SILL PROFILE



PREPARATION

- Determine and mark the position (bubble level, chalk line).



ANGLED SECTION

- Cut the angled section to size for the right side of the window sill profile (saw, mitre box or electric mitre saw).



- Lightly sand the cut edges and the edges with sandpaper or cutter.



- Remove the sawdust with a damp sponge.




- Using a cartridge gun, generously apply the DOMOSTYL® HYBRID adhesive in a continuous bead on the backside (see GLUE CONSUMPTION).



- Install angled section.



- Turn right-angled window sill profile with the lower edge upwards and mark the appropriate length on the lower edge.

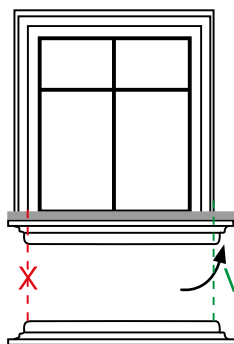

WINDOW SILL PROFILE ANGLED ON BOTH SIDES

- After installation, the window sill profile should be sufficiently protrude.



- Cut the left side angle of the window sill profile to size.



- Fit the left side angle, remove excess adhesive with a cloth soaked in turpentine substitute.

ANGLED WINDOW SILL PROFILE



- Apply DOMOSTYL® HYBRID adhesive to the wiped adhesive surfaces of the angled window sill profile as a continuous bead, diameter 10mm, all around (see GLUE CONSUMPTION).



- Fit the window sill profile, if necessary, use nails to prevent the window sill profile from slipping.



- Install professionally the metal or stone window sill.

FRAME PROFILES



- Position the frame profile (let it protrude by approx. 2mm) and mark the position (spirit level).



- Cut the frame profile to fit the mitre (saw and mitre box or electric mitre saw).



- Apply DOMOSTYL® HYBRID adhesive to the back of the profile all around as a continuous bead (diameter 10mm) (see GLUE CONSUMPTION).



- Apply DOMOSTYL® HYBRID adhesive to the gluing surfaces and mitre cuts (liberated from sawdust). The surface should be completely covered with the adhesive. The adhesive joint must be formed so that it has a width of 3 mm after completion.



- Install frame profiles, butt joints and mitre joints with DOMOSTYL® HYBRID adhesive. After drying (approx. 24 hours), fill the adhesive joints again with DOMOSTYL® HYBRID adhesive.



- Joint professionally with DOMOSTYL® HYBRID adhesive the frame profiles including the protruding edge in the area of the window jam.



- After the joints have dried (approx. 24 hours), smooth the window reveal along the protruding edge of the frame profile, which has been grouted with DOMOSTYL® HYBRID adhesive, with a facade filler.



- After drying, coat the facade profiles 2 times with pure acrylate based facade paint (see FINISH).



STRING COURSE



- Install in the same way as the window sill profiles, the joint in the upper area of the belt cornice must be formed into a groove



CUT IN THE PROFILE (DOWNPIPE)



- If cuts have to be made, they can be cut straight, in which case the cut edge is sealed with DOMOSTYL® Hybrid adhesive. It is also possible to angle the profiles on both sides.

KEY STONE



- Determine and mark the position of the keystone (spirit level).





- Measure the course of the cut (protractor).



- Adjust the course of the cut in the mitre box or electric mitre saw.



- Mark the course of the cut on the frame profile. Cut frame profiles to size.



- Mount the keystone, if necessary fix it with a nail.





- Cut the frame profiles to size and then mount.



AREA OF THE ROOF OVERHANG AND PASSAGE



- There are 2 possibilities. 1) Window sill profiles run parallel to the roof overhang and verge. 2) Window sill profiles run horizontally at the gable. In both cases, the mitres are cut with a 45° cut setting.



- If an additional frame or window sill profile is to be installed in the gable area, the cutting angle must be measured with a protractor (positioning angle) and the profile cut to size.



GABLE




- Define and mark position.



- Measure the angle, set the mitre box or electric mitre saw and cut the pointed gable.



- Mount the pointed gable.

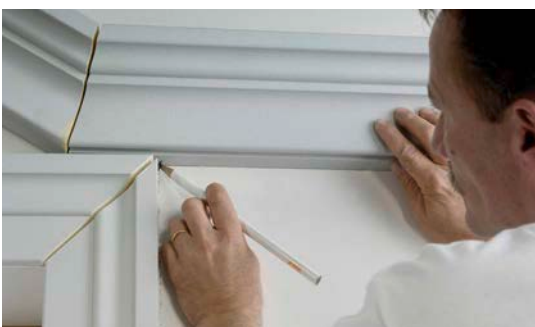

- Cut the side parts to size and assemble





STONES



- Define and mark position.



- If you want the stones to border the corner of the house, there are 2 possible cuts.
1) Cut the corner stones so that the chamfer remains visible, or



- 2) Cut the chamfer away.



- The butt joints and mitre joints must be glued and grouted with the DOMOSTYL®HYBRID adhesive.





- Stones can be installed in offset, row or interspersed.



CEILING ROSES



- ARSTYL® ceiling roses and pilasters may also be used outdoors.
- Before installation, the back of the products must be primed with solvent-based synthetic primers.
- After drying, they are mounted and grouted with DOMOSTYL® HYBRID adhesive. After they have dried again, they must be painted twice with pure acrylate-based facade paint


REPAIR OF DAMAGED PROFILES



- Minor damage can be filled with DOMOSTYL® HYBRID adhesive.



- Major damage, straighten.

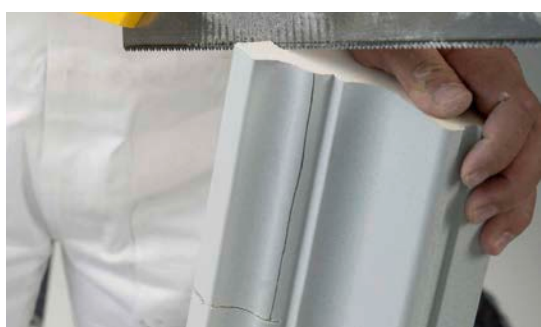

- Cut a piece to the appropriate size (use a profile of the same reference).



- Adjust the piece, glue with DOMOSTYL® HYBRID adhesive and fill in. After drying, paint with pure acrylate-based facade paint (see FINISH).



CONTACT

BENELUX

NMC SA / AG

Gert-Noël-Straße

B - 4731 Eynatten

T +32 87 85 85 00

F +32 87 85 85 11

info@nmc.eu

DEUTSCHLAND

NMC Deutschland GmbH

Weiherhausstraße 8 b

D - 64646 Heppenheim

T +49 62 52 967 - 0

info@nmc-deutschland.de

FRANCE

NMC France sas

Z.I. de la Forêt

97, Route d'Anor - CS 10103

F - 59613 Fourmies Cedex

T +33 3 27 60 81 00

F +33 3 27 59 98 55

info@nmc-france.fr

UNITED KINGDOM

NMC UK Ltd.

Unit 1 East, Bridge Road

UK - Brompton on Swale – Richmond, DL10 7HS

T +44 1969 623410

F +44 1969 624398

sales@nmc-copley.co.uk

AUSTRIA

MAPA plus

Riedlerweg 15

T 0316 - 24 39 49

info@mapa.at

mapa.at

SWITZERLAND

Jules C. Binder SA

Z.I. du Moulin du Choc D

CH-1122 Romanel-sur-Morges

T +41 21 691 48 49

F +41 21 691 48 89

info@jules-c-binder.ch

